

IMPORTANT NOTICE

Please note that the manual that comes with your 2-RAIL ATLAS LOCOMOTIVE does not contain the correct Function Keys. Please use the function list below to properly use your Atlas locomotive:

F0 Directional Headlights

F1 Bell

F2 Playable Airhorn

F3 Coupler

F4 Dynamic Brakes

F5 MARS Light

F6 Class Lights

F7 Switching Mode

F8 Sound (On/Off)

F9 Drive Hold

F10 Independent Brake

F11 Radiator Fan

F12 Dimmer (Headlights)

F13 Not in use

F14 Smoke Unit

F15 Fast Spitter Valve

F16 Spitters on Shutdown

F17 Brake Set / Brake Release

F18 Sanding Valve

F19 Short Air Let Off

F20 Compressor

F21 Slow Spitter Valve

F22 Not in use

F23 Not in use