


N EMD SD-35 DIESEL LOCO (A)

CHINA

ORDER PARTS ➔

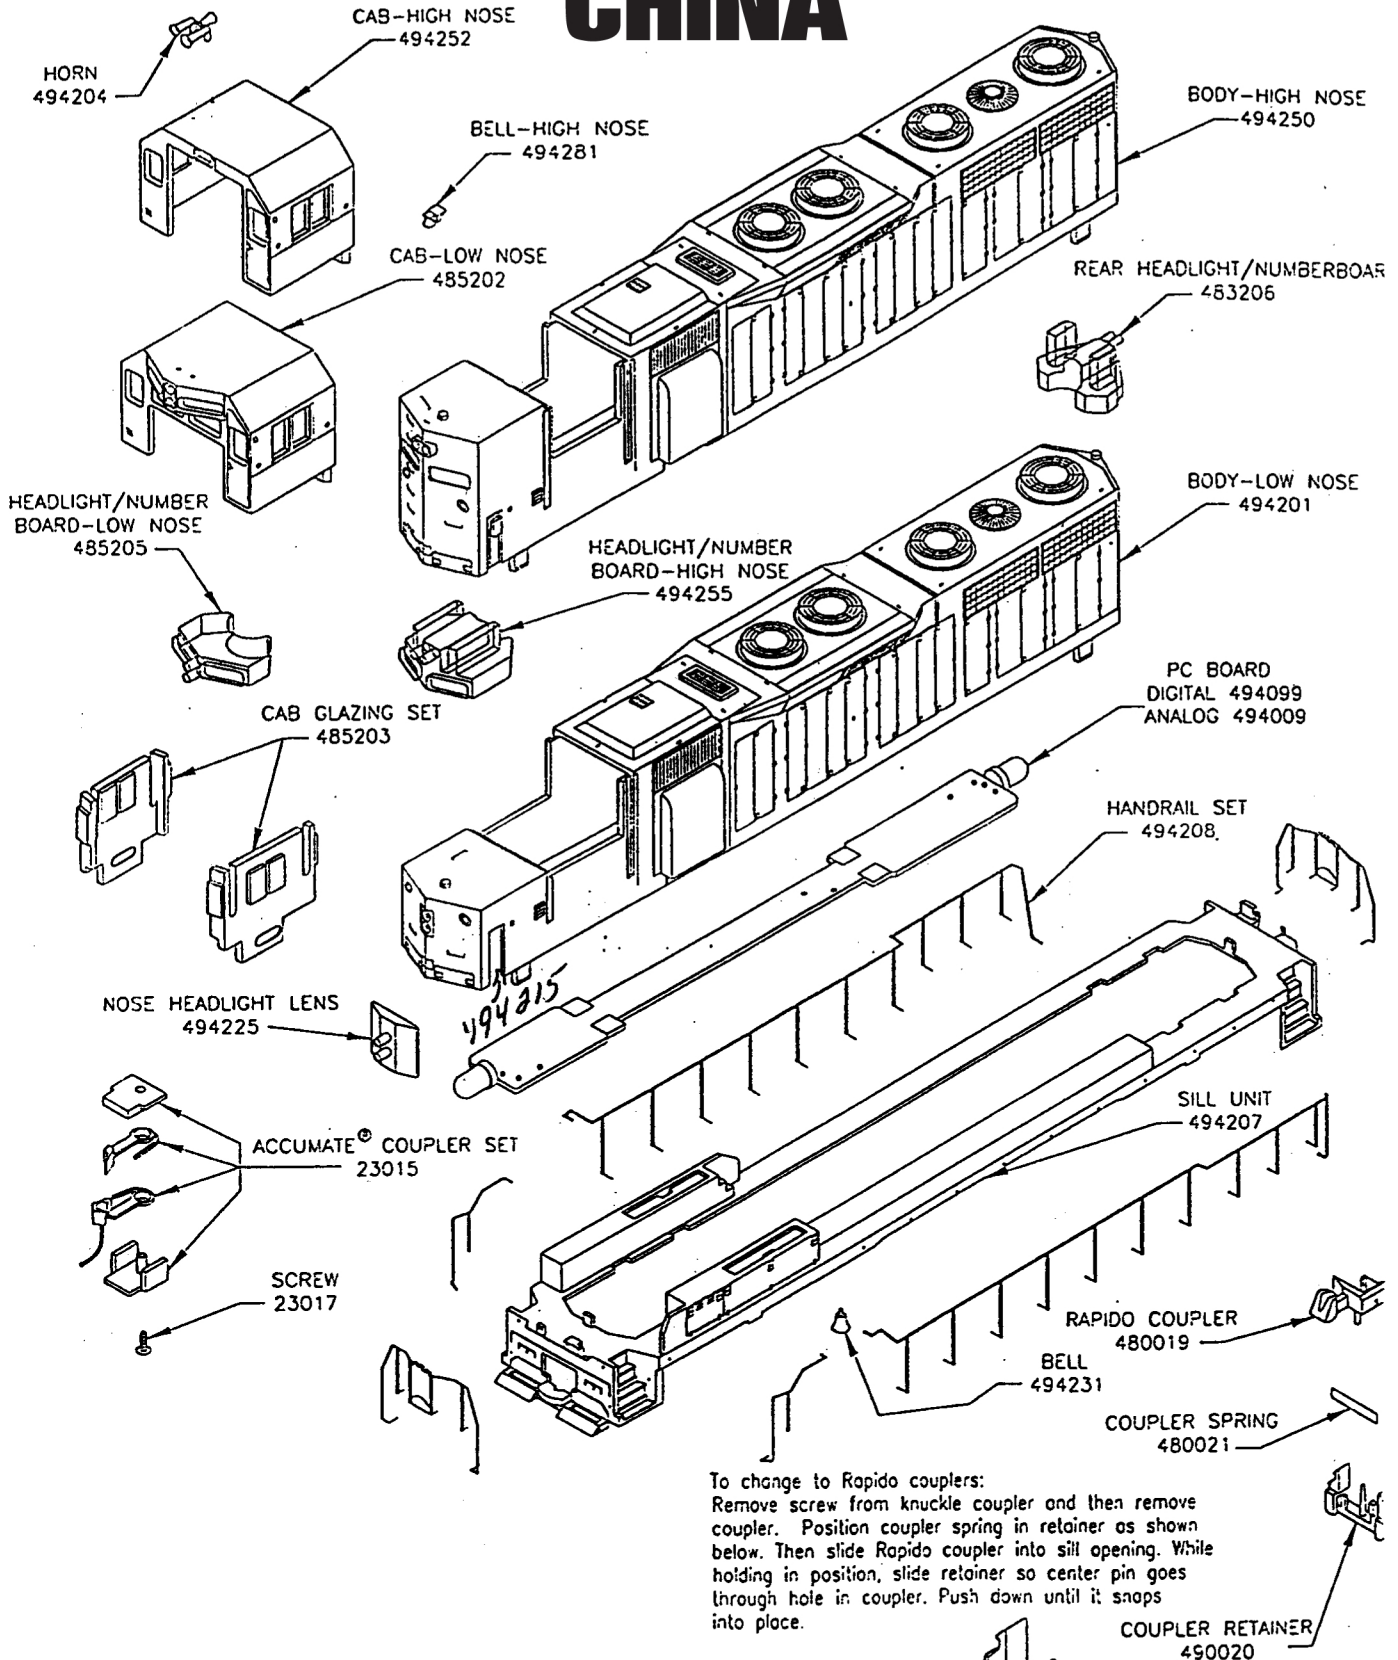

To change to Rapido couplers:
Remove screw from knuckle coupler and then remove coupler. Position coupler spring in retainer as shown below. Then slide Rapido coupler into sill opening. While holding in position, slide retainer so center pin goes through hole in coupler. Push down until it snaps into place.

COUPLER SPRING

NOTE

- 1) Maximum operational voltage: 12V DC
- 2) Additional lubrication at time of purchase is not recommended.

N EMD SD-35 DIESEL LOCO (B) CHINA

