


CALIFORNIA ZEPHYR 10/6 SLEEPER AND DOME CHAIR COACH WINDOW REPLACEMENT PROCEDURE

- 1) Place the car in a foam cradle or on a soft towel.
- 2) Remove the four body mount screws (refer to the instructions that came with the car for their location).
- 3) Remove the body from the chassis by holding the body with one hand and pulling on the truck with the other. Be careful not to break any detail. The body and chassis will be a tight fit.
- 4) Disconnect the electrical plug located at the end of the car at the end opposite the side doors.
- 5) Gently press in on the windows to break the glue bond, then remove the windows from the shell.
- 6) The replacement windows will contain four window glass pieces and four strips of window blinds.
- 7) Remove the protective backing on the double sided tape affixed to the glazing (four pieces on each glazing section) and remove the protective plastic film from the blinds, if it did not come off when removed from the shipping plastic. Line the blinds up with the glazing and rest the top of the blinds strip onto the alignment tabs molded on the new glazing, then press onto the double sided tape. Repeat four times per car.

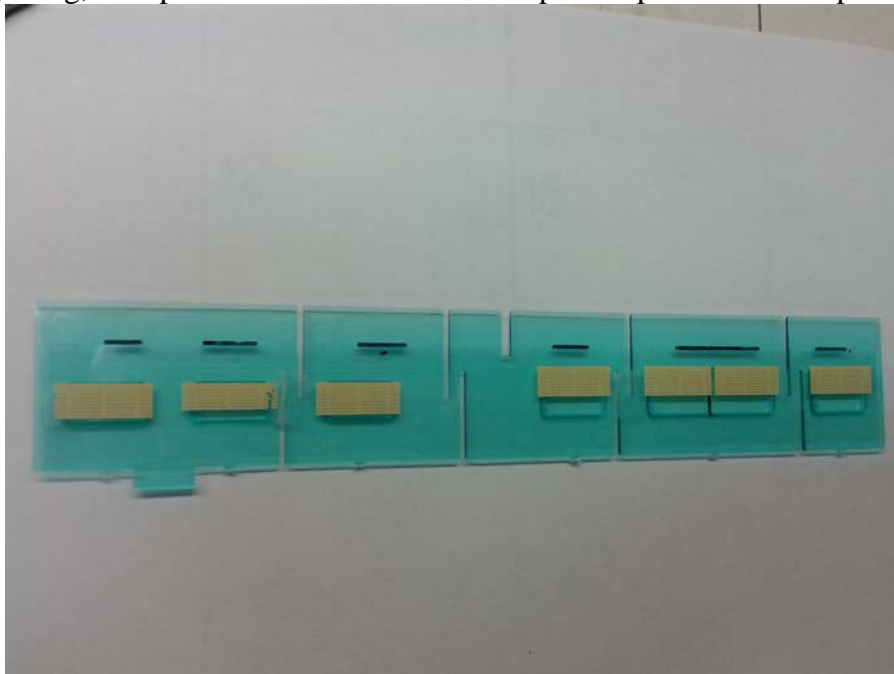

- 8) Place the appropriate window glazing in place in the car shell and use a small amount of glue to secure it. (Do not use ACC type super glue, we recommend white glue or model airplane canopy glue).
- 9) Reconnect the electrical plug from the body to the plug on the chassis.
- 10) Put the body back onto the chassis and install the four body mount screws.